

CATEGORY 6 “HIGH DENSITY” MODULAR CONNECTOR INSTALLATION INSTRUCTIONS

- 1.) Strip off 1.5” inches of cable jacket.
- 2.) Bring cable jacket end up to the center of the color code label.
- 3.) Place wires into the proper channels in the termination strips.
 - a. For T568A wiring follow the color code marked “A” (Fig. 1)
 - b. For T568B wiring follow the color code marked “B” (Fig. 1)
- 4.) Terminate using 110 Punch Down tool.

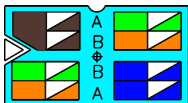


Fig. 1

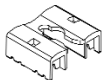


Fig. 3

- 5.) Place protective cap over termination strips.

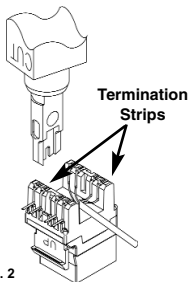


Fig. 2

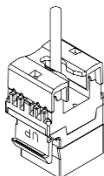


Fig. 4

- 6.) Finish installation by routing cable as shown on Fig. 4

Note: For locations where there is limited rear clearance the cable may be left in the horizontal position as shown in Figs 2 & 3