



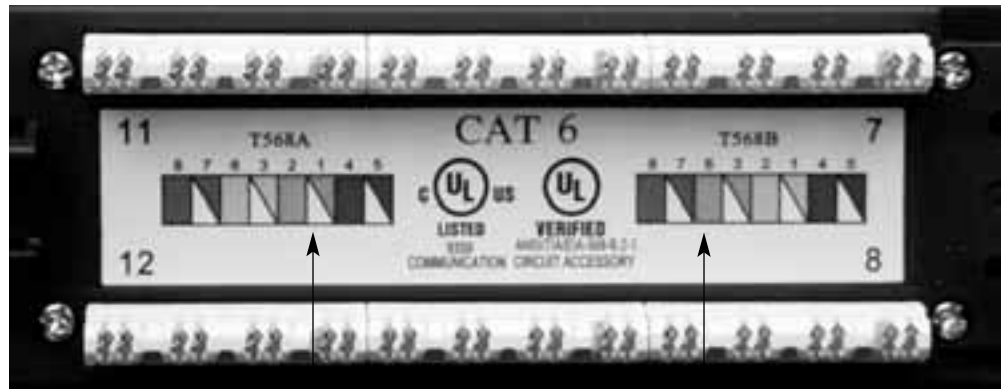

Installation Instructions

Patch Panel - IC110 Type 8 Pos. 8 Cond. (CAT 6, Universal Wiring)

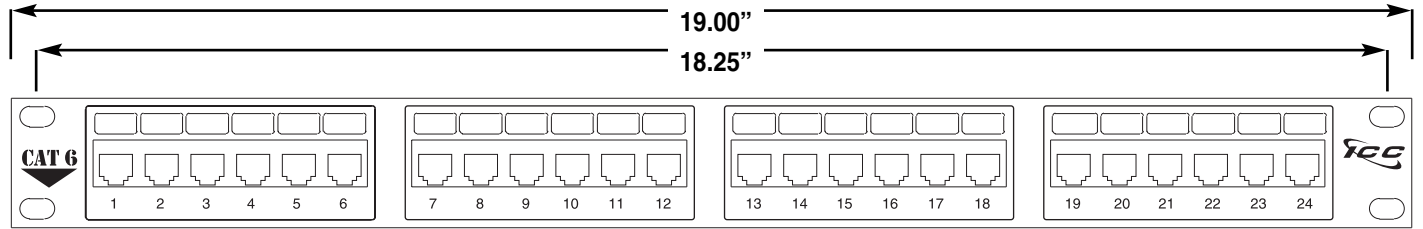

T568A Color Coded

T568B Color Coded

ITEM NO.	NO. OF PORTS	H
ICMPP02460	24	1.75"
ICMPP04860	48	3.50"

Hardware Included	Quantity
12-24 Mounting Screws	4 per panel
6" Cable Ties	5 per rack space
CAT 6 Termination Caps	48 per rack space

Installation Instructions page 2

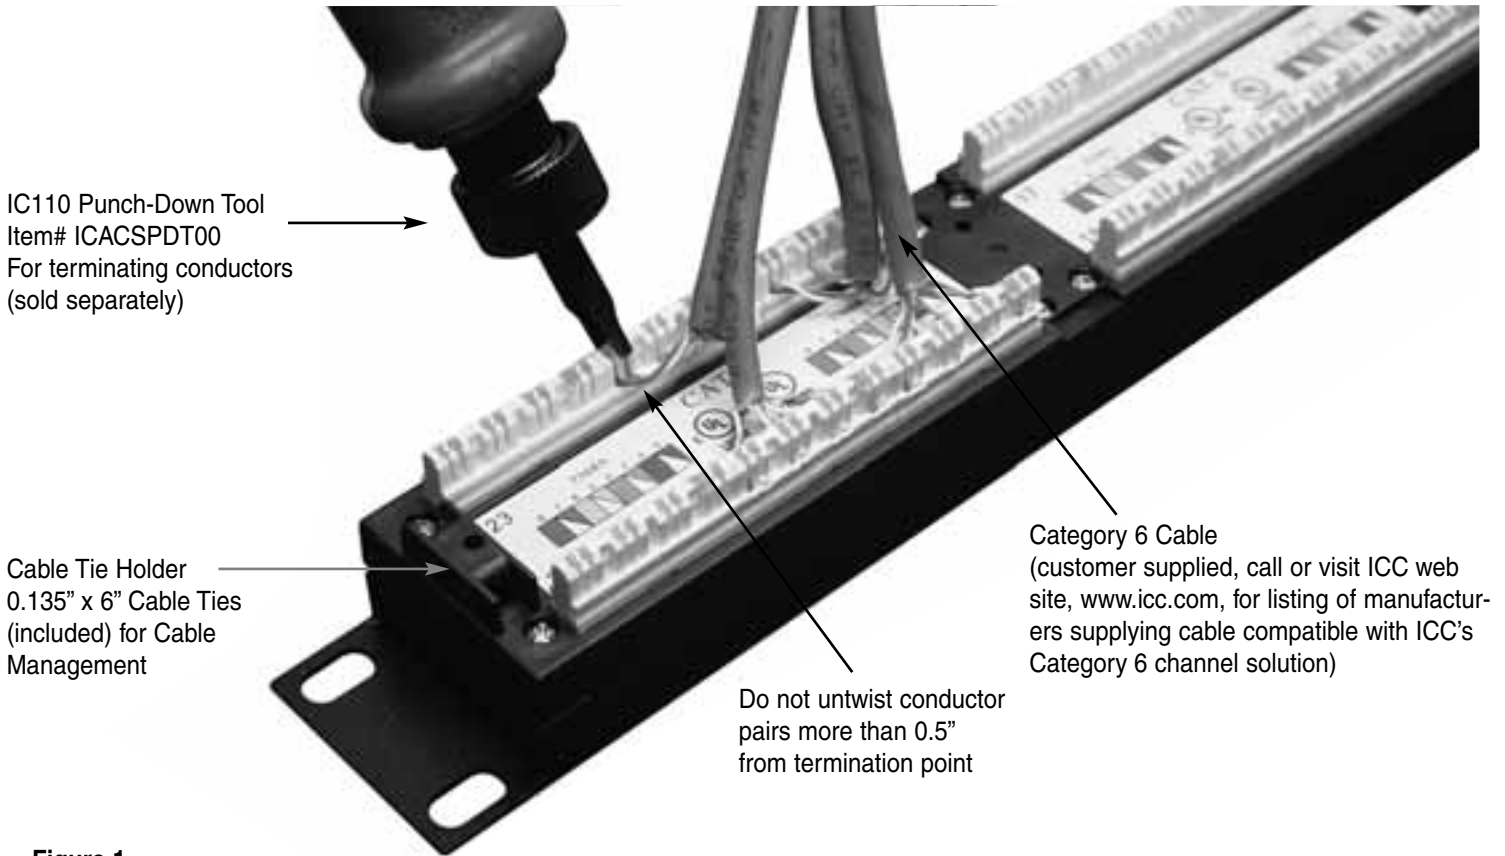


Figure 1.
T568B Wiring Diagram


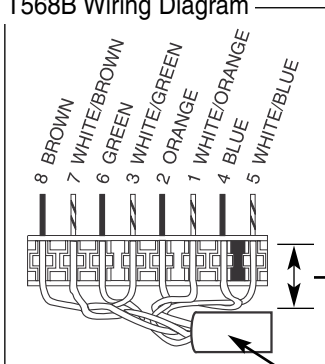


Figure 2.
T568A Wiring Diagram

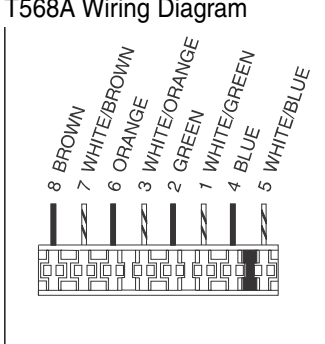

Instructions:

Unpack patch panel and place the panel with the 110 type connectors exposed. Orient the panel with the blue colored 110 connector in the upper right hand corner. Proceed to the Installation Practices.

Installation Practices

- 1) When preparing the cable for termination, maintain the cable sheath as close to the termination point as possible.
- 2) Use the cable tie anchors provided to secure and route cables.
- 3) When securing cables, maintain minimum bend radius of four times the cable diameter and do not overtighten cable ties.
- 4) **IMPORTANT: Press the conductors firmly into the proper 110 channel according to the color coded label, maintaining less than 0.5" of untwist.(See Figure 1 & 2)**
- 5) Set punch-down tool to low impact setting.
- 6) Align punch-down tool directly over conductor to be terminated, perpendicular to the 110 channel, with cutting blade in proper orientation.
- 7) Push down to terminate and trim conductors.
- 8) Proceed to the next conductor to be terminated.
- 9) **IMPORTANT: Install termination caps supplied, after cables are terminated, and before testing.**